


Numbering shows order of installation.

- 1) CHASE CRACK USING A “V”-SHAPED DIAMOND BLADE.
- 2) PATCH WITH PC GELCOAT. INSTALL FIBERGLASS MESH INTO WET MATERIAL.
- 3) TOP COAT WITH SPECIFIED PC COATING.

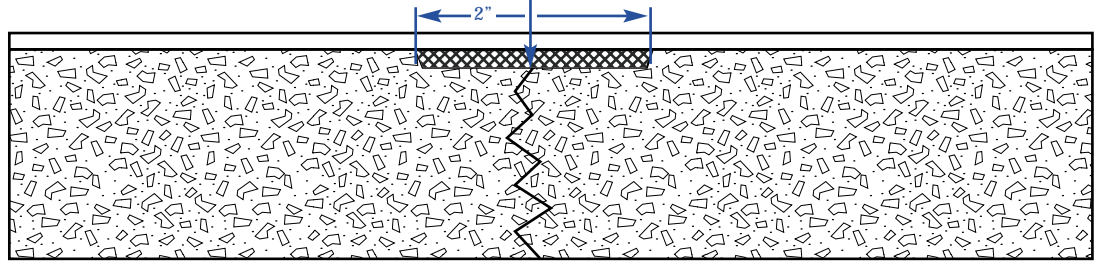

If crack is hairline or micro, chase crack with a “V”-shaped diamond blade and fill with PC JOINTCOAT. Fiberglass tape may not be required.