


**Termination at drain for all PC Floor Systems.**

Numbering shows order of installation.

- 1) CHIP CONCRETE BACK 3" FROM DRAIN.

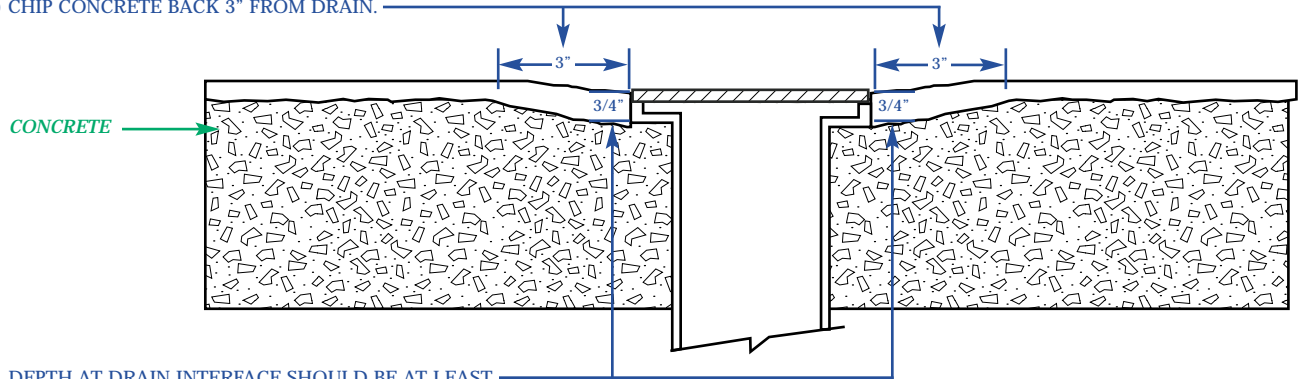

DEPTH AT DRAIN INTERFACE SHOULD BE AT LEAST 3/4" FROM FINISH HEIGHT.

- 2) FILL VOID WITH PC FLOORING MATERIAL.

If a light duty or medium duty flooring system is to be used, this “key in void” should be filled using PC GELCOAT.