


TERMINATION FOR LIGHT AND MEDIUM DUTY FLOOR SYSTEMS

Numbering shows order of installation.

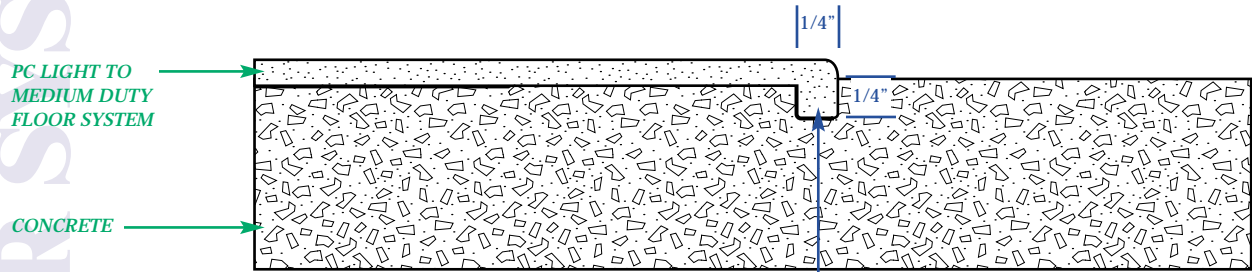

- 1) SAW CUT 1/4" DEEP BY 1/4" WIDE
- 1) FILL WITH PC FLOORING MATERIAL.

TERMINATION FOR LIGHT AND
MEDIUM DUTY FLOOR SYSTEMS